



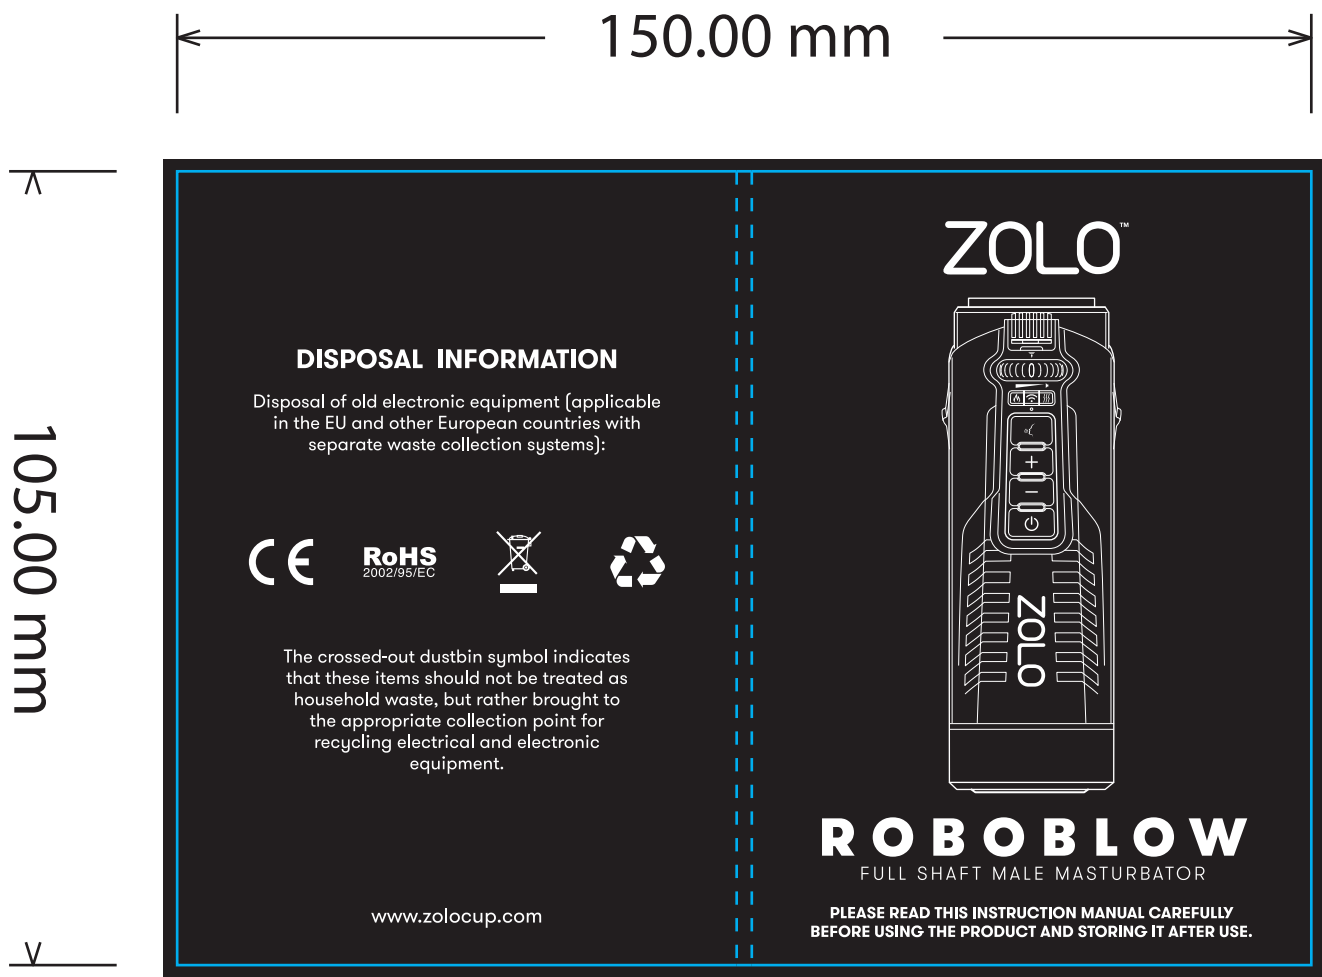

COVER

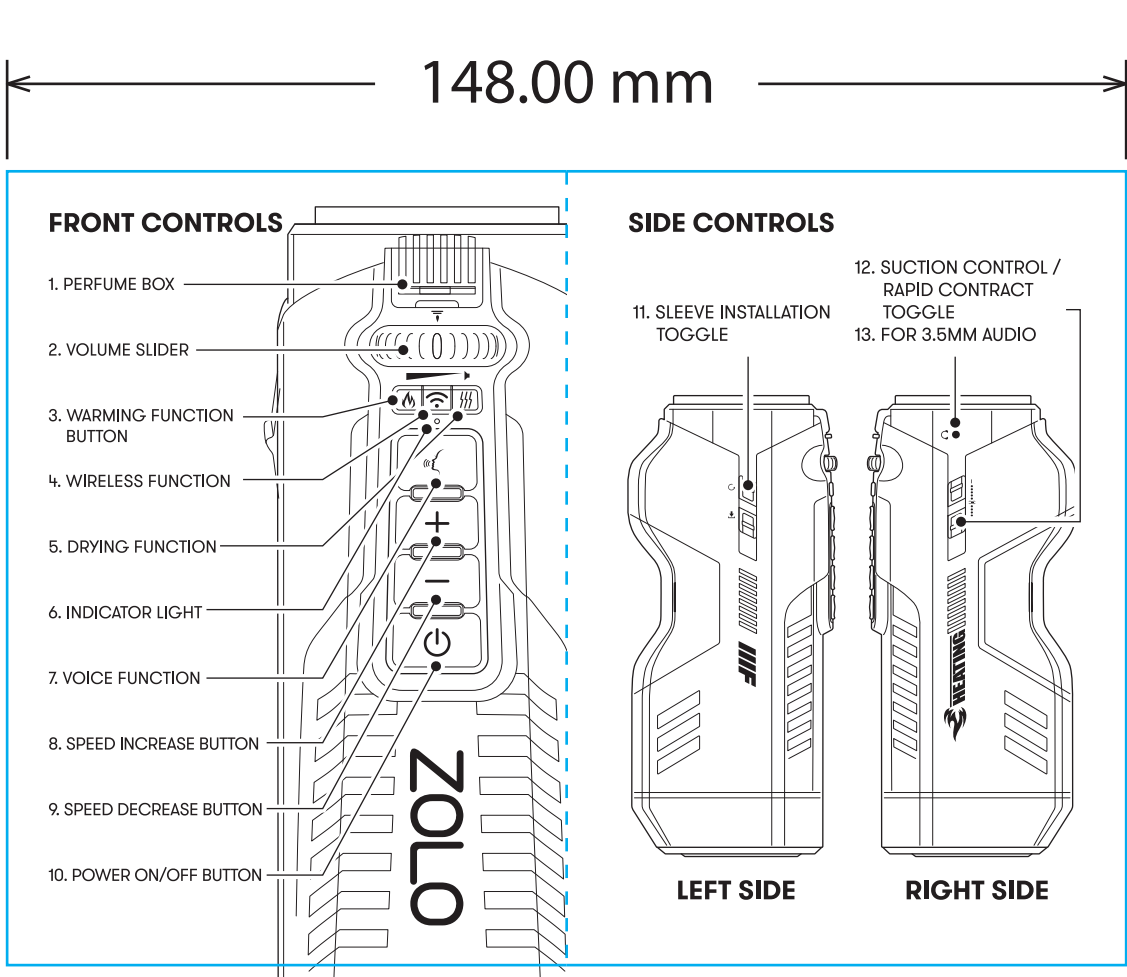

01-02

DETAILED FUNCTIONS:

1. PERFUME BOX (PERFUME NOT INCLUDED)

- Remove the lid of the perfume box from the ROBOBLOW and add 2 to 3 drops of perfume or essential oil.
- Reattach the lid to the ROBOBLOW.
- Flip the perfume box switch to the left to diffuse the perfume, and flip it again to stop.

2. VOLUME SLIDER

Drag the slider from right to left to increase the volume of the Voice Function. (NOTE: The Volume Slider only controls the volume of the Voice Function when the ROBOBLOW is not paired to a Wireless speakers/headphones. When it is paired, the only way to adjust the volume is directly from the Wireless device. Voice Function applies while the ROBOBLOW is on thrusting.)

3. WARMING FUNCTION BUTTON

- Attach the power cable to the ROBOBLOW. Keep the ROBOBLOW in OFF mode.
- Remove the cap from the underside of the ROBOBLOW.
- Flip the Sleeve Installation toggle upwards and the stroker meat will "retract upwards", leaving the mouth of the stroker exposed.
- Clean the interior of the sleeve with a towel and make sure that it is as dry as possible before proceeding.
- Reattach the cap to the underside of the ROBOBLOW. Make sure the ROBOBLOW is standing on a leveled surface before proceeding.
- Press the Warming Function button of the ROBOBLOW to begin the process. All the buttons on the front panel of the ROBOBLOW will flash blue. (NOTE: During this process, no other functions of the ROBOBLOW will be available for use)
- After roughly 10 minutes, press the Warming Function button once again to stop the process.
- Remove the cap from the underside of the ROBOBLOW.

03-04

DETAILED FUNCTIONS:

4. WIRELESS FUNCTION

- Press and hold the Wireless Function button to enable the Wireless mode. The ROBOBLOW's built-in Wireless will automatically start searching for nearby Wireless-enabled speakers/headphones for pairing.
- In the meantime, please make sure your Wireless-enabled speakers/headphones are in DISCOVERABLE mode.
- The Indicator Light on the front panel of the ROBOBLOW will flash blue while searching for Wireless-enabled speakers/headphones. Once the ROBOBLOW has paired successfully, the Indicator Light will remain in a solid-state for the entire duration of when the Wireless is in use.
- After pairing successfully, the Voice Function will bypass the ROBOBLOW's built-in speakers and play directly on the Wireless-enabled speakers/headphones. (NOTE: When the Wireless Function is enabled, the only way to control the volume of the Voice Function is through the Wireless device's controls)

5. DRYING FUNCTION BUTTON

- Attach the power cable to the ROBOBLOW. Keep the ROBOBLOW in OFF mode.
- Remove the cap from the underside of the ROBOBLOW.
- Flip the Sleeve Installation toggle upwards and the stroker meat will "retract upwards", leaving the mouth of the stroker exposed.
- Clean the interior of the sleeve with a towel and make sure that it is as dry as possible before proceeding.
- Reattach the cap to the underside of the ROBOBLOW. Make sure the ROBOBLOW is standing on a leveled surface before proceeding.
- Press the Drying Function button of the ROBOBLOW to begin the process. The four buttons on the front panel will take turns flashing blue in color. (NOTE: During the Drying process, no other functions of the ROBOBLOW will be available for use)
- After usage, press the Drying Function button once again to stop the process.
- Remove the cap from the underside of the ROBOBLOW.
- Press the ON/OFF button to begin using the ROBOBLOW. The Drying Function works continuously up to 60 minutes.

05-06

DETAILED FUNCTIONS:

6. INDICATOR LIGHT

- The Indicator Light on the front panel of the ROBOBLOW will flash blue for the entire duration of when the Voice Function is in use.
- The Indicator Light will flash blue while searching for Wireless-enabled speakers/headphones. Once the ROBOBLOW has paired successfully, the Indicator Light will remain in a solid-state for the entire duration of when the Wireless Function is in use.

7. VOICE FUNCTION

- Press the Voice Function button once to start.
- The Indicator Light on the front panel of the ROBOBLOW will flash blue for the entire duration of when the Voice Function is in use.
- Press the button again to turn off the Voice Function.
- To adjust the volume, drag the volume slider from right to left to increase the volume, and vice-versa to decrease the volume.

8. SPEED INCREASE & 9. SPEED DECREASE

- To adjust the vibration function's speed of the ROBOBLOW, press the button to increase the speed by one level and the button to decrease the speed by one level. There are total 10 levels. (3 Speeds + 7 modes)
- Press and hold the button for two seconds to activate the Fastest Speed function. This allows for the user to jump to the fastest speed without having to press the button repeatedly.
- At the Fastest Speed function, all four buttons on the front panel will flicker blue in color.
- To deactivate the Fastest Speed function, simply press the Voice Function button, the button or the button. This will reset the speed of the vibration function of the ROBOBLOW to the lowest setting.
- To stop the vibration function, simply press the button repeatedly until it stops.

07-08

DETAILED FUNCTIONS:

10. POWER ON/OFF BUTTON

- To turn the ROBOBLOW on or off, press and hold the button for 5 seconds.
- When it is powered on, press the button once to pause any ongoing vibration functions. All four buttons will flash blue in color. (NOTE: If the ROBOBLOW is left in the pause state for more than half an hour, the ROBOBLOW will automatically turn itself off)
- Press the button once more to resume any ongoing vibration functions.

11. SLEEVE INSTALLATION TOGGLE

- To swap the textured sleeve of the ROBOBLOW, attach the power cable to the ROBOBLOW. Keep the ROBOBLOW in OFF mode.
- Flip the Sleeve Installation toggle to and remove the sleeve from the ROBOBLOW.
- Insert the other sleeve into the ROBOBLOW then flip the Sleeve Installation toggle to. Your ROBOBLOW is now ready for use.

12. SUCTION CONTROL / RAPID CONTRACT TOGGLE

- To activate the Suction Control function, slide the toggle towards the symbol to slowly increase the intensity of the suction. The more you slide it towards the symbol, the more intense the suction function will be.
- To reset the suction function, simply slide the toggle towards the symbol and hold it for 2 seconds.
- To activate the Rapid Contract function, slide the toggle towards the symbol quickly to start.
- The Rapid Contract function has 10 patterns, and slide the toggle towards the symbol quickly to switch between patterns.
- To deactivate the Rapid Contract function, slide the toggle towards the symbol and hold it for 2 seconds. (NOTE: if the Suction Control function is also in use when you are deactivating the Rapid Contract function, both functions will deactivate at the same time)

09-10

SAFETY FEATURE:

- To prevent any accidents due to user error or unexpected circumstances, the ROBOBLOW has an automatic fail-safe feature that will activate in the event where the stroker is jammed during any of the functions.
- When the safety feature is activated, the ROBOBLOW will emit 2 beeping sounds and the control panel will flash red in color 5 times continuously.
- The ROBOBLOW will cease functions for a short period before resuming any active functions.
- If the safety feature is activated 10 times continuously, the ROBOBLOW will slowly disengage any functions while emitting a low-toned sound, then it will power off.

CLEANING INSTRUCTIONS:

- Attach the power cable to the ROBOBLOW. Keep the ROBOBLOW in OFF mode. Remove the cap from the underside of the ROBOBLOW. Flip the Sleeve Installation toggle to and remove the sleeve from the ROBOBLOW.
- Rinse the sleeve under room-temperature level water, avoid using hot water.
- Wipe the interior and exterior of the sleeve, this prevents any damage to the ROBOBLOW.
- Flip the Sleeve Installation toggle to and insert the other sleeve into the ROBOBLOW.
- Activate the Drying Function to keep the sleeve dry before next use.

11-12

2 TEXTURED SLEEVES

SLEEVE A **SLEEVE B**

SPECIFICATIONS:

Product name: ZOLO ROBOBLOW
Executive standards: Q/LTDZKJ 1-2019
Power supply: AC 100-240V
Product material: ABS, TPU, PC and TPE
Product size: 126 x 100 x 280mm
Accessories description: Masturbator, Operation manual, Charger, 2 Textured sleeves, Travel bag

Model: See outer packaging
Rated current: ≤5A
Rated voltage: 12V
Maximum noise: ≤80db

CHARGING INSTRUCTION

Plug the included charging cable into the charging interface of the ROBOBLOW, and the power adapter cable into a power outlet.

13-14