50 mm

150 mm

ZOLO®

MULTI-SPEED BULLETS WITH CONTROLLER FOR STROKER

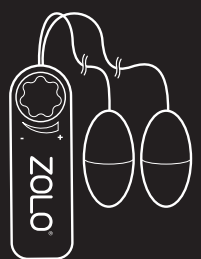

⚠ WARNING:

THIS ITEM IS NOT WATERPROOF.

DO NOT IMMERSE BULLETS AND CONTROLLER IN WATER. IF YOU SPILL LIQUID ON IT, DRY IT IMMEDIATELY WITH A SOFT, LINT-FREE CLOTH.

GETTING STARTED

1. Clean your masturbator before and after use. Wipe the main body clean with warm water and soap, or with a non-alcohol based toy cleaner. Wipe dry with a soft towel.
2. Insert the bullets into the back holes of the masturbator.

BATTERY

Insert 2x AA batteries into the back of your controller. (Batteries not included)

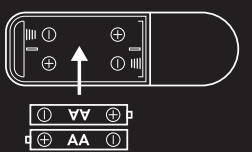

CONTROLS

Rotate the dial counter-clockwise to desired vibration level.

CLEANING THE MASTURBATOR

1. Remove the bullets before cleaning your masturbator.
2. Clean with warm water and soap or non-alcohol based toy cleaner.
3. Wipe dry thoroughly with a soft towel.

CARE

1. Always clean your device thoroughly before and after each use.
2. We recommend using a premium water-based lubricant when needed. Silicone-based lubricants are not recommended. **Never** use hand cream, or massage oils as lubricants for your intimate areas.
3. To properly clean your bullets, use a damp cloth.
4. Avoid leaving your bullets in direct sunlight and never expose it to extreme heat.
5. The bullets and controller are **NOT** waterproof, Do not wash or immerse in water.

SPECIFICATIONS

Materials:	ABS Plastic
Dimension:	Bullet: 2.5cm x 5.6cm

CE UK CA

XGEN, LLC
Horsham, PA 19044
All Rights Reserved
www.zolocup.com

FRONT **BACK**

ZO3011 ZO3014